

mont・bell

取扱説明書

# コンパクトファイヤーピット


Compact Fire Pit

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。  
なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

## ■ 特長

本製品は、ソロキャンプやツーリングにおすすめの軽量コンパクトな焚き火台です。独自の深型構造により、安定した火力が持続します。  
別売りのクッカースタンドを使用していただくと調理を楽しむこともできます。両側面の扉が開くため、調理中に燃料を追加しやすく、また、本体より長い枝などを投入できる構造となっています。  
手軽に携帯可能な収納袋付きです。

## ■ 各部の名称

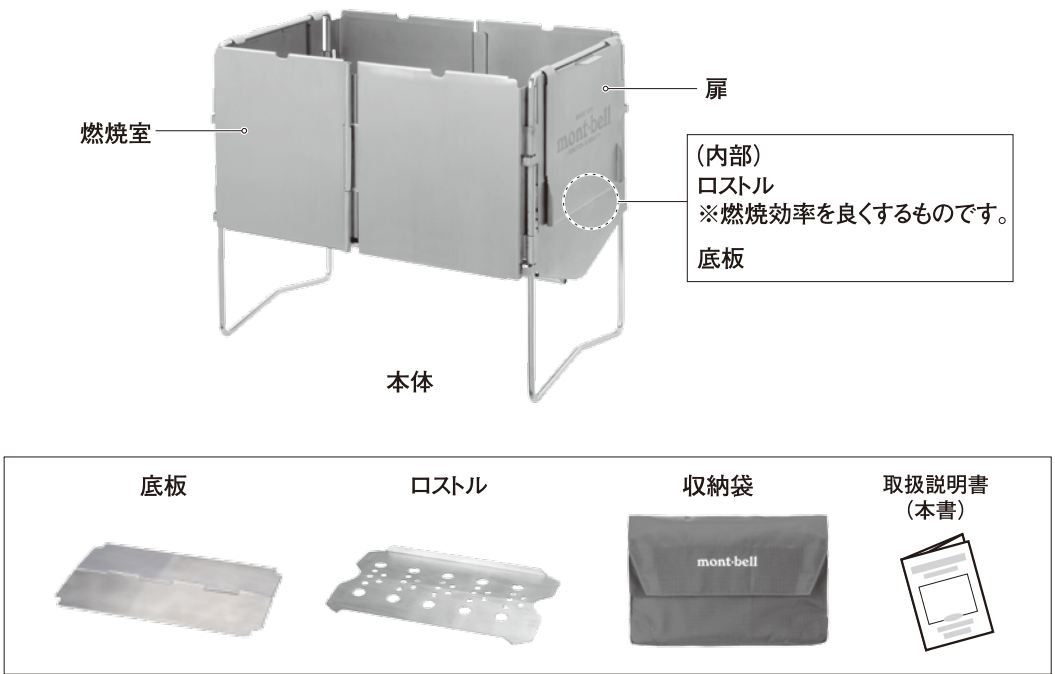

## ■ 安全上の注意 必ずお読みください

**危険** 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- 本製品は風通しのよい屋外で使用してください。テント内、車内、室内など、換気ができない場所では絶対に使用しないでください。燃焼によって一酸化炭素が排出され、一酸化炭素の吸入により死亡または脳障害を引き起こす可能性があります。また、屋外であってもテントの近くで使用するとテント内に一酸化炭素が充満する恐れがありまので、テントから離れた場所でご使用ください。
- 本製品は、木材や炭を燃焼するように設計しています。ガソリン、灯油などの液体燃料、ガス、ジェル、プラスチックは絶対に燃焼室に入れないでください。
- 本製品はガソリンやその他の可燃性の液体や可燃性ガスから、少なくとも10メートル以上遠く離れた場所でご使用ください。使用中は非常に高温になり、炎の近くに可燃物があると引火する可能性があります。

**警告** 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 使用前に毎回必ず点検をしてください。老朽化や損傷が認められたり、本製品の状態が疑わしい場合は直ちに使用を中止してください。本来の性能を発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管を行うと、本来の性能を発揮できない恐れがあります。
- 使用前に可燃物や熱による影響を受けやすいものが周囲にないことを確認してください。また、乾いた草の上など延焼の危険がある場所では使用しないでください。
- 強風下では使用しないでください。また、使用中に風が強くなった場合は直ちに消火し、使用を中止してください。
- 使用後は本製品が完全に冷たくなるまで絶対にその場を離れないでください。
- パラフィン加工や塗装、染色、加圧加工された木材や、合板を燃料に使用しないでください。また流木、ごみを燃料に使用しないでください。
- 樹液の多い木材や湿った木材は避けてください。過度の火花の原因となる場合があります。

**注意** 人が傷害を負ったり物的損害の発生が想定される内容です。

- 本製品の組み立てや収納の際は、指や手をはさまないようにご注意ください。また、本製品のフチなど鋭利な部分がありますので、ケガにごご注意ください。
- 使用中や使用後は本体が非常に高温になり、触れるとやけどの恐れがあります。また、周囲の状況に注意しお子さまやペットが近づかないようにしてください。
- 使用中は炭がはぜたり、火の粉が飛ぶ恐れがあります。顔などを近付けしないでください。
- 本製品に強い衝撃をあたえたり、収納した状態で重いものを載せないでください。変形し組み立てが出来なくなることがあります。
- 耐荷重を超える物を載せないでください。破損の恐れがあります。
- 燃料の入れ過ぎにごご注意ください。炎が高く上がるため大変危険です。
- 必ず付属のロストルを使用してください。
- 必ず水平で安定する場所で正しく使用してください。組み立てが不十分な場合は転倒する恐れがあります。また、不安定な設置状態では使用しないでください。
- お子さまの手の届かないところで使用・保管してください。
- 使用の際は耐熱手袋や器具を使用し、細心の注意を払って作業を行ってください。
- 使用中の本製品を移動させないでください。
- 使用後は残り火の始末に十分注意してください。収納する際は十分に温度が下がっていることを確認してから行ってください。また、緊急時以外は本体に水をかけたりしないでください。急激に温度が変化し、本体の破損・変形の原因になります。

- 設置や収納は必ず両手で行ってください。乱暴な取り扱いにはケガや本体の破損の原因となります。
- 使用により変色や歪みが発生することがありますが使用に支障はありません。
- 本体にさびが発生することがありますが使用に支障はありません。
- 公園や河川敷などの公用地やキャンプ場などの管理地で使用する場合は各自治体や管理者に確認して使用してください。
- 焚き火や火気類の使用が禁止されている場所では絶対に使用しないでください。

## ■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。


□破損箇所がないか

## ■ 使用方法 鋭利な部分がありますので、指などを切らないよう取り扱いにご注意ください。

**注意** ご使用の際は耐熱手袋や器具を使用し、細心の注意を払って作業を行ってください。



### ○ 1 組み立て

- ① 収納袋から取り出し、図のように広げます。側面も中から押してしっかり開きます。  
※必ず水平で安定する場所で使用してください。  
※乾いた草の上など延焼の危険がある場所では使用しないでください。周りに可燃物が無いことを確認してください。  
※本製品周りの地面に乾燥した枝などが落ちている場合は片付けます。

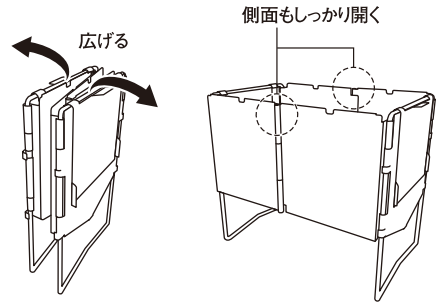


### ② 底板を燃焼室に敷きます。

- ※底板は必ず入れて使用してください。
- ※底板はフラットな面が上になるように入れてください。

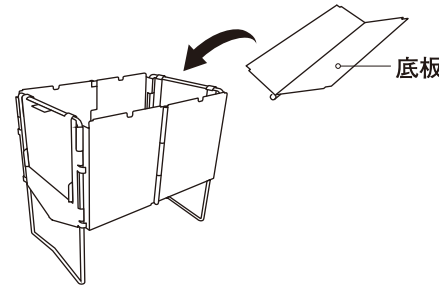


- ③ 空気の通り道を作り、燃焼効率を良くするため、ロストルを燃焼室に入れます。  
※ロストルは必ず入れて使用してください。  
※ロストルは山が上になるように入れてください。

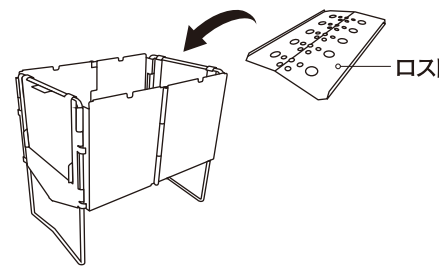

○2 着火

- ❶ロストルの中心に着火剤などを置きます。その上に空気の通り道を作りながら燃料を積み上げます。
- ❷柄の長いライターなどで着火剤などに着火します。

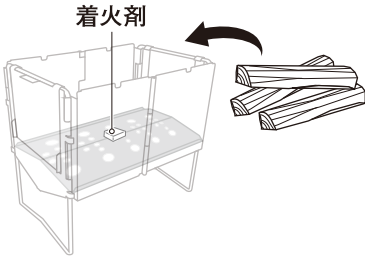

「燃料」とは、例えば薪、枝、炭などを指します。乾燥した小枝の削りくず、樹皮、乾燥した小枝などは、火おこしに最適です。広葉樹などの乾燥した高密度の木材は、最も高温で長く燃えます。本製品は、側面の扉を閉じた状態で長さが最大 19cm の燃料に合うように設計されています。

※濡れていたり、湿っている木材や葉を燃料に使用しないでください。不完全燃焼と煙の原因となります。

薪の長さ




○3 燃料の追加

着火して火が安定してくると、徐々に大きい乾燥した燃料を追加できるようになります。燃料を追加する際は耐熱手袋や器具を使用し、細心の注意を払って作業を行ってください。

■ 上から追加する

燃焼室の上部まで燃料を積み込むことができます。

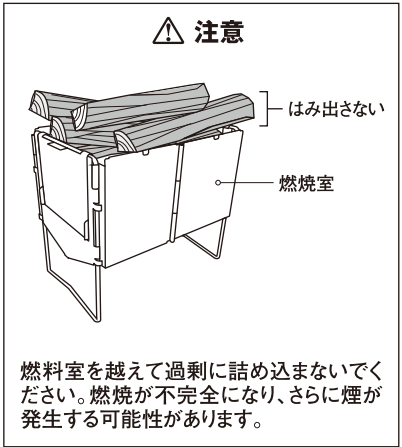

■ 両側面の扉から追加する

調理中に側面の扉を開けて、燃料を追加することができます。



使用中は非常に熱くなり、やけどの恐れがあります。決して直接触れないでください。また、炭がはぜたり、火の粉が飛ぶ恐れがありますので、顔などを近付けないでください。



燃料を追加する際は、耐熱性のある器具などを使用して火をかきため、空気の流れができるようにしてください。



灰が底板に溜まる構造ですが、隙間から若干地面に落ちます。後述の清掃方法をご覧ください。

○4 消火と清掃方法

- ❶燃料が灰になり冷えるのを待ちます。

- ❷ロストルを取り出し、燃焼室の底板に溜まった灰を取り除いてください。灰の廃棄は各自治体の収集方法に従ってください。



使用後は残り火の始末に十分注意してください。収納する際は十分に温度が下がっていることを確認してから行ってください。また、緊急時以外は本体に水をかけたりしないでください。急激に温度が変化し、本体の破損・変形の原因になります。

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。



金属に水分や極端な熱変動が加わると、さびが発生します。以下は本製品の寿命を伸ばして外観を保つための注意事項です。

- 完全に本製品が冷え、消火したことを確認してから灰を全て取り除きます。油汚れや焦げ付き、塩分などは食器用洗剤できれいに洗浄します。湿った紙タオル、布、またはブラシで拭いて完全に乾燥させてください。
- スチールたわしやクレンザーを使用すると、キズがつくことがあります。

■ 保管方法

- 直射日光の当たらない風通しの良い場所で保管してください。雨がかかる場所や、過度の湿気ある場所に本製品を置かないでください。
- 本製品を風雨や直射日光が当たる屋外で長期間設置しないでください。変形、破損など、その他不具合が起こる恐れがあります。
- 収納した状態で重いものを載せないでください。変形し組み立てが出来なくなることがあります。
- お子さまの手の届かないところに保管してください。

■ 廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ オプション（別売） 本製品は下記の別売のオプションを利用することができます。

- コンパクト ファイヤービット クッカースタンド  
鍋やフライパンでの調理に便利な五徳です。

■ 仕様・サイズ

品番	1122769
品名	コンパクト ファイヤービット
材質	ステンレス鋼
燃料	薪、炭
耐重	10kg
サイズ	ズ：(使用時) 21×14.5×高さ19cm (収納時) 20×14×5cm
付属品	品：ロストル、収納袋

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

MEMO



mont·bell

User's Manual

# Compact Fire Pit


## Compact Fire Pit

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.  
If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

### Features


Features a deep shape and a lightweight, compact design, providing a steady flame for great use while solo camping or touring. Enjoy camp cooking by using with the Compact Fire Pit Cooker Stand (sold separately). Side doors on both sides open, allowing you to easily add fuel while cooking, and to fit fuel that is longer than the fire pit. Comes with a stuff sack for easy carrying.


### Components

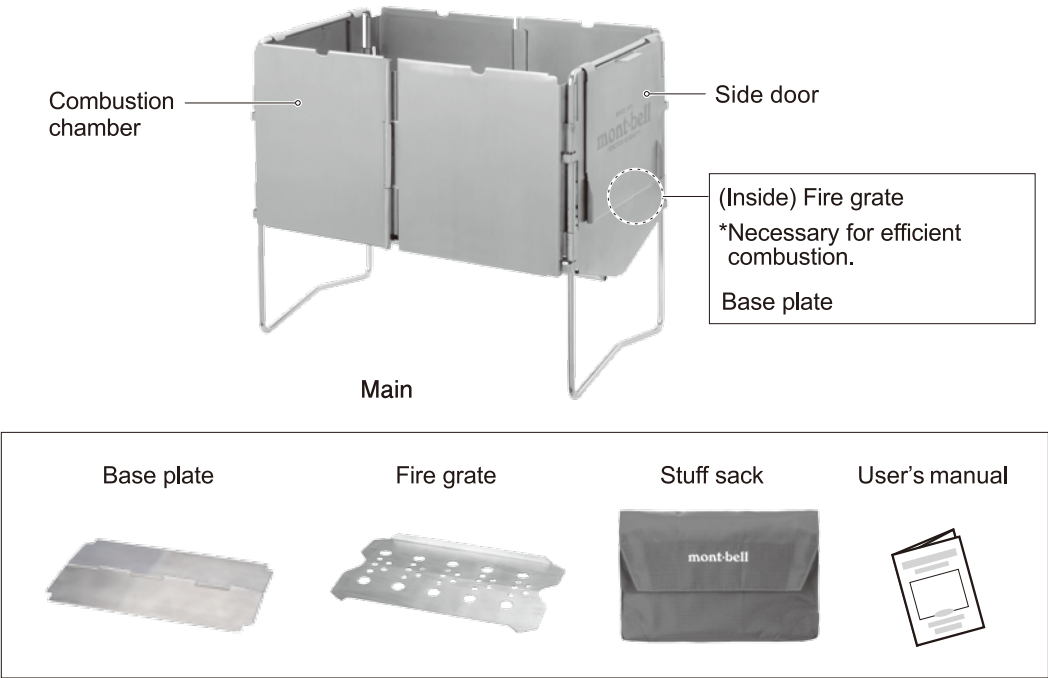


### Safety Warnings!

Please read carefully.

- **DANGER!** Under certain conditions, use of this product can result in major injury or death.
- Use this product outside in a well-ventilated area. Do NOT use indoors, inside a vehicle or inside a tent. A byproduct of burning fuel is CARBON MONOXIDE. Inhalation of CARBON MONOXIDE can cause death or brain damage. Do NOT use near a tent. Even when used outdoors, placing near the tent may result in the tent filling with CARBON MONOXIDE.
  - This product is designed to burn wood and charcoal. Do NOT put the following fuels into the combustion chamber: liquid fuels such as gasoline or kerosene, gas, gels or plastics.
  - Keep gasoline and other flammable liquids and vapors at least 10 meters away from this product during use. During use, this product is capable of producing high temperatures which could ignite fuel sources nearby.

- **WARNING!** Under certain conditions, use of this product can result in injury, death, or property damage.
- Prior to use, check this product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
  - Please follow recommended care and storage instructions. Improper care and storage can lead to a decrease in performance.
  - Before use, check the area for combustible materials. Do NOT use in areas where there is a danger of fire spreading, such as over dry grass.
  - Do NOT use during strong winds. If strong winds start after use, stop using immediately and put out fire.
  - After use, do NOT leave the product unattended until it has cooled completely.
  - Do NOT burn the following: painted, stained, waxed, or lacquered wood, particle board, plywood, driftwood or trash.
  - Avoid using wet wood or woods with a high resin content (soft woods such as pines and cedar). Burning these materials may cause excessive sparking.

- **CAUTION!** Under certain conditions, use of this product can result in injury or property damage.
- When putting the stove together be careful of pinching. Product may have sharp edges.
  - Product will be extremely hot during and after use. Avoid handling the stove to prevent burns and keep children and pets away from stove.
  - Charcoal can pop, sending embers and sparks into the air. Do NOT sit too close to the product to avoid injury.
  - To prevent this product from bending or becoming damaged, do NOT apply strong shocks. Also, do NOT stack heavy items on top of this product when it is folded up.
  - Do NOT put anything on this product that exceeds its weight limit.
  - Avoid overfilling the combustion chamber. Height of flames can become dangerous.
  - Always use the fire grate.
  - Use this product on a flat, level surface. If the product is not properly assembled, it could tip over during use. NEVER use on an uneven surface.
  - Do NOT allow children to set up or dismantle this product.
  - Use fireproof gloves and other tools when tending the fire.
  - Do NOT move the product during use.
  - Be careful when cleaning embers out of the combustion chamber. Make sure the product has cooled completely before putting back into the carry case. Do NOT douse with water unless there is an emergency. The extreme temperature change will damage and/or warp the product.

- Use both hands when setting up the product. Improper setup can cause injury or damage the product.
- During use, the product may change colors or bend slightly, but this has no effect on performance.
- Product may rust, but this has no effect on performance.
- Contact the public authority for rules on usage before using in public places, such as parks.
- Do NOT use in areas where fireworks or burn bans are in effect.

### Prior to use, inspect this product for:

☐ Damage to the product

### Directions


Be careful of the sharp edges when handling the fire pit.

**CAUTION!**



Use fireproof gloves and other tools when tending the fire.

#### 1 Folding



- ①Take the fire pit out of the carrying case and pull each side to open. Make sure the folding sides are fully deployed.
- ※Set up the fire pit on a flat, level surface.
- ※Before use, check the area for combustible materials. Do NOT use in areas where there is a danger of fire spreading, such as over dry grass.
- ※Clear the area of combustible materials such as dry leaves and sticks.

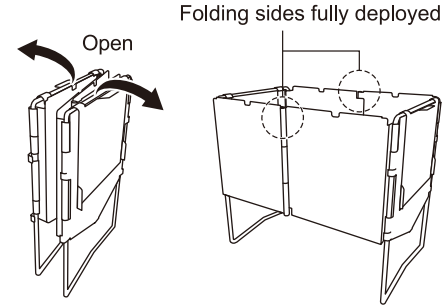

- ②Place the base plate in the combustion chamber.
- ※Always use the base plate.
- ※Place the base plate with the hinge facing down.

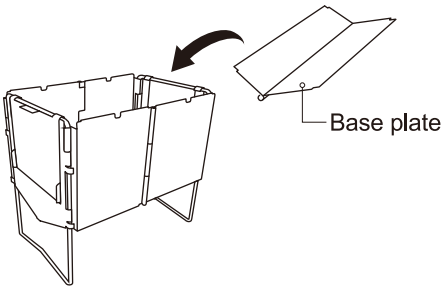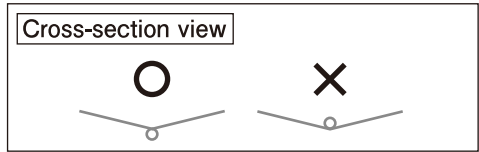


- ③In order to increase air flow and improve combustion efficiency, place the fire grate in the bottom of the combustion chamber.
- ※Always use the fire grate.
- ※Insert the fire grate so it is pointed up (see figure).

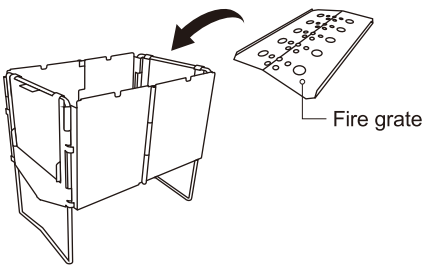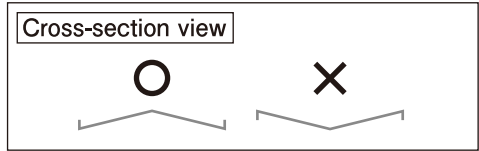

○ **2 Starting a fire**


- ❶ Place tinder on the middle of the fire grate. Place fuel on top of the tinder making sure that there is ample air flow.
- ❷ Use a long lighter or match to ignite the tinder.

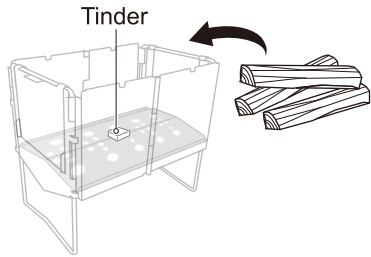

⚠ The definition of "fuel" in this user's manual means logs, sticks and charcoal. Dry twigs, sticks and bark are suitable for tinder. Wood from broad-leaved trees makes excellent material for fires as it burns hotter and longer. This product is designed to fit fuels with a maximum length of 19 cm when the side doors are closed.

※Do NOT use wet wood or leaves as fuel. They will not combust completely and can cause smoke.

Fuel length




○ **3 Adding fuel**

As the fire begins to burn steadily, it is necessary to add dry, larger pieces of fuel. When adding fuel, use heat-resistant gloves, firepit tools, and work with extreme caution.

■ Adding fuel from the top


Fuel can be loaded to the top of the combustion chamber.

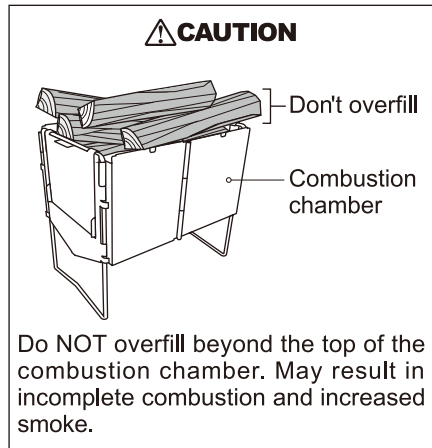

Do NOT overfill beyond the top of the combustion chamber. May result in incomplete combustion and increased smoke.

■ Adding fuel through the side doors

Open the side doors even while cooking to add more fuel.

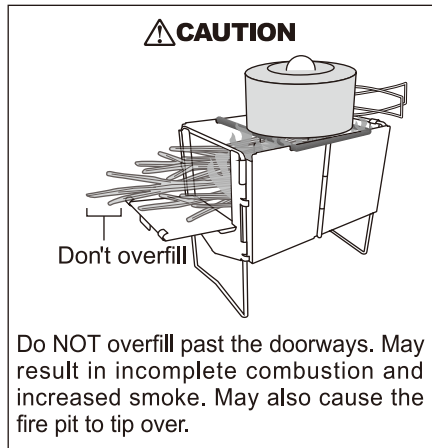

Do NOT overfill past the doorways. May result in incomplete combustion and increased smoke. May also cause the fire pit to tip over.

⚠ Fire pit will be extremely hot during and after use. Avoid handling the fire pit to prevent burns. Keep your face away from charcoal as it may pop, causing sparks to fly.

⚠ When adding fuel, use heat-resistant fire pit tools to stoke the fire and allow air flow.

⚠ The product is designed for ash to accumulate on the base plate, but may leak onto the ground through cracks.

○ **4 Extinguishing the Fire and Cleanup**

- ❶ Wait for the fire to die down and the embers to cool.
- ❷ Take out the fire grate and clean out the ash that has accumulated on the base plate inside the combustion chamber. Consult your local authority on proper disposal of ash.



Be careful when cleaning embers out of the combustion chamber. Make sure the product has cooled completely before putting back into the carry case. Do NOT douse with water unless there is an emergency. The extreme temperature change will damage and/or warp the product.

■ **Care** Improper care and storage can shorten the lifespan of this product. Follow the recommendations below to extend the lifespan of your product.



Rust can develop if it is exposed to moisture or experiences extreme changes in temperature. Use the following procedures to extend the life of your fire pit.

- Make sure the fire pit has cooled completely before attempting to clean the ash out of the combustion chamber. Use dish soap to clean oil, burnt food and salt. Use a damp towel, paper towel or brush to wipe down the fire pit and then dry completely.
- Steel wool or hard brushes may scratch the fire pit.

■ **Storage**

- Store in a well ventilated, cool, dry place out of direct sunlight and keep out of rain.
- Extended exposure to the elements can cause warping and damage to the product.
- To prevent this product from bending or becoming damaged, do NOT stack heavy items on top of this product when it is folded up.
- Do NOT allow children to set up or dismantle this product.

■ **Disposal**

- Please follow local regulations regarding waste disposal.

■ **Warranty**

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ **Accessories (Sold separately)**

The following accessories are available for use with this product.

- **Compact Fire Pit Cooker Stand**  
Convenient for using with a pot or frying pan.

■ **Specifications**

Style# : 1122769  
Name : Compact Fire Pit  
Materials : 【Main, Fire grate】stainless steel  
Fuel : wood, charcoal  
Weight Limit : 10kg  
Size : 【Setup】 21×14.5×19cm  
          【Folded Dimensions】 20×14×5cm  
Included : Fire grate, Stuff sack

**MEMO**

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

**mont-bell Co.,Ltd.**  
2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN  
<https://www.montbell.com/>